

HRW Limited – WMS2 Set-up

Setup Instructions

Important: Avoid removing power from the WMS2 without properly shutting it down by selecting “Server Functions” in the system menu, then selecting “Shut Server Down”



1. Connect a standard Ethernet cable from the WMS2 unit to a hub or router on your network. Do not connect directly to your computer unless you are using a “crossover” cable as this could damage the WMS2 and/or your computer
2. If using a LonWorks or ModBus 485 USB adapter, connect it to the upper-left USB port using the supplied USB cable. A second USB adapter can be plugged in to the lower-left USB port
3. Plug the supplied power adapter into a wall outlet, then in to the WMS2 unit
4. It could take up to two minutes for the WMS2 to boot for the first time
5. If your network is not set to use 192.168.0.x, you may need to temporarily set your network to use that address or use a different computer. If this is not possible, contact us for further instructions
6. Load a web browser on your PC, and in the address bar, type “<http://192.168.0.50:8651>” (be sure to include the “http://”) and press “Enter”. To get to the legacy Flash interface, use <http://192.168.0.50:8651/goFlash>”
7. You should see the WMS2 login screen. If you do not see a login screen, wait 30 seconds and click the “Refresh” button in the browser. If you still do not see a login screen, check your network settings and the address in the browsers address bar
8. Log in to the WMS2 with the username of “admin” and password of “pass”. You will be required to set a secure password. Record the administrator password in a safe place. Recovering a lost administrator password is not a simple process
9. If the IP address needs to be changed, select “Edit Settings” from the system menu, then select “Network Settings”. After changing the network settings, select “Reboot Server” from the “Server Functions” menu

Once the unit is up and running at the desired IP address, click the “?” (Help) button on the bottom toolbar. There you will find a tutorial with instructions for quickly connecting to a network, connecting devices and creating a simple dashboard.


Default Settings

- IP Address: 192.168.0.50
- Web server (HTTP) port: 8651
- Administrator Username: admin
- Administrator Password: pass


HRW Limited – WMS2 Set-up

Important! If the case is ever opened, the micro SD card must be temporarily removed to close it again.

Front

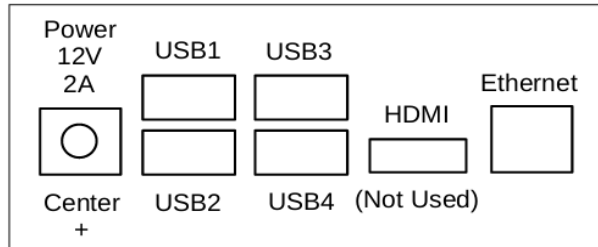

Back

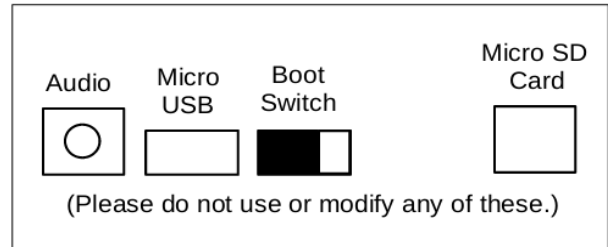

For more information go to www.hrw.hk or email admin@hrw.hk